

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Condition before rectification



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Condition before rectification



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete

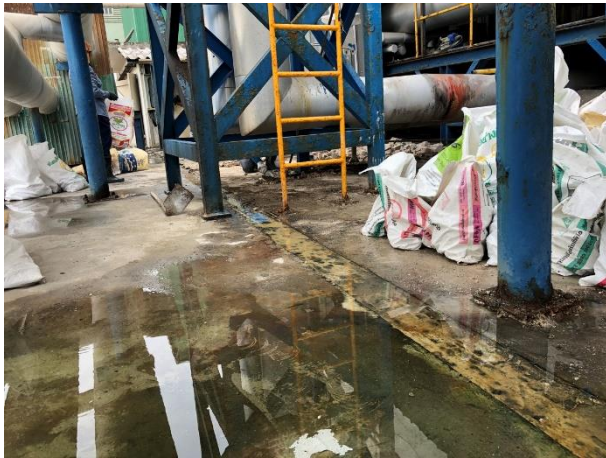

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete

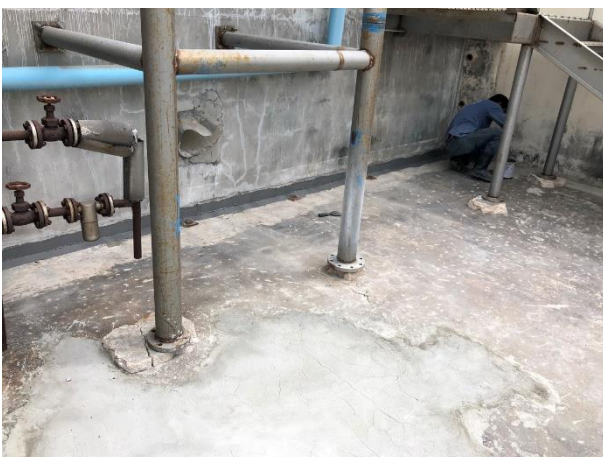

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Repair Damage area and cast concrete



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane

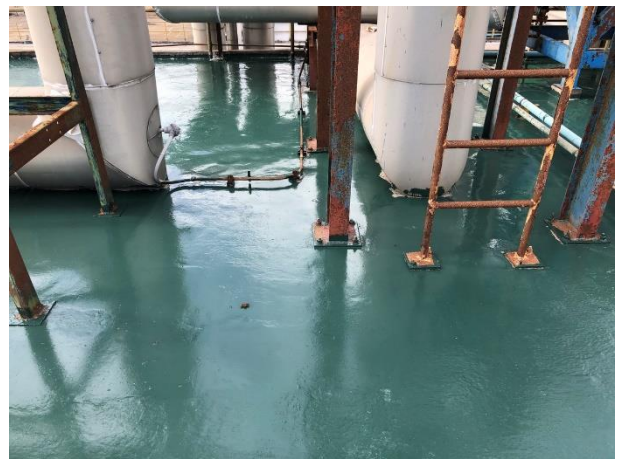

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane

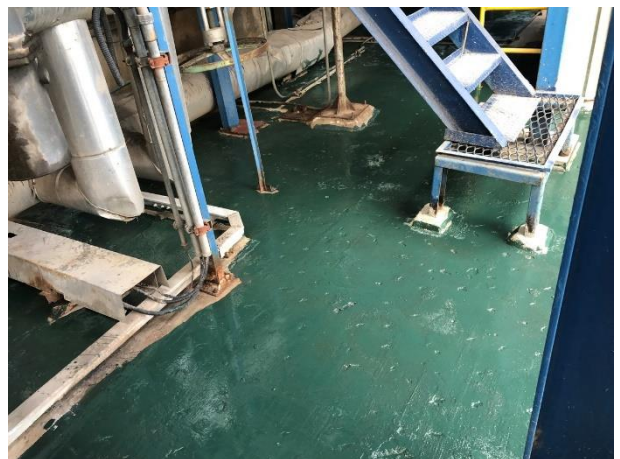


TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane

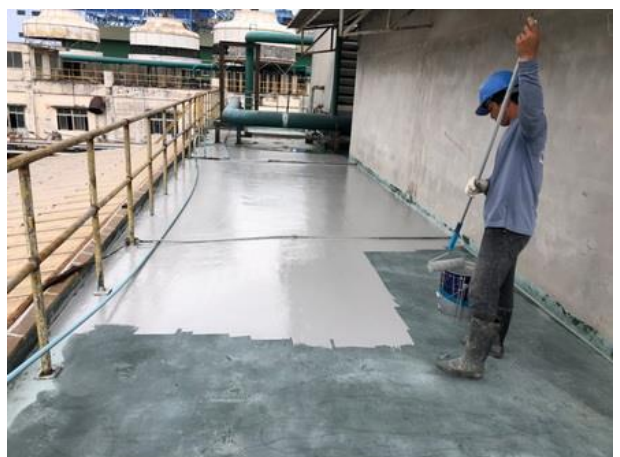


TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane

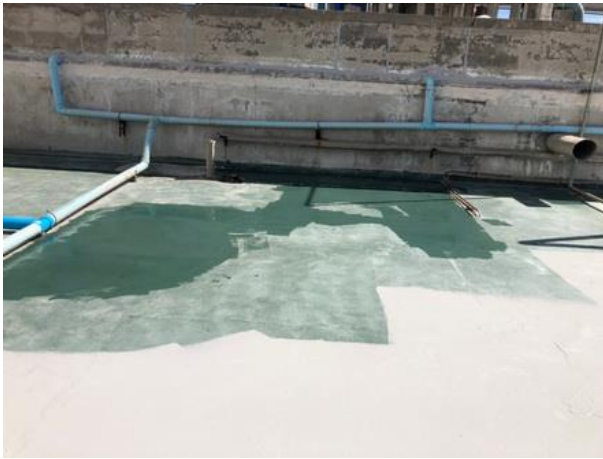

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane

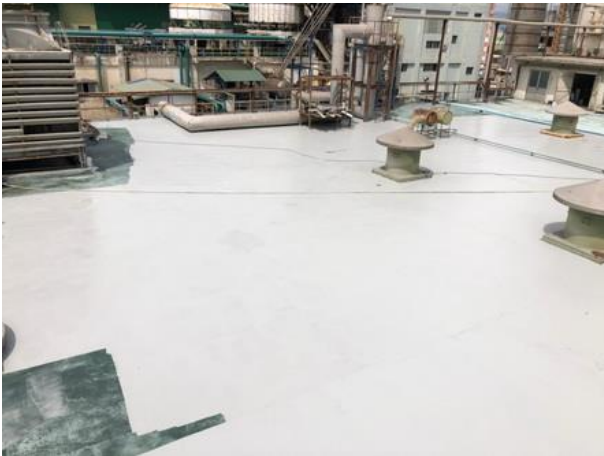

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Roof Deck: Apply waterproof membrane



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Staircase: Condition before repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Staircase: Roof Deck repair and waterproof



***TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope***

Staircase: Roof Deck repair and waterproof



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Staircase: Ceiling repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Staircase: Ceiling repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

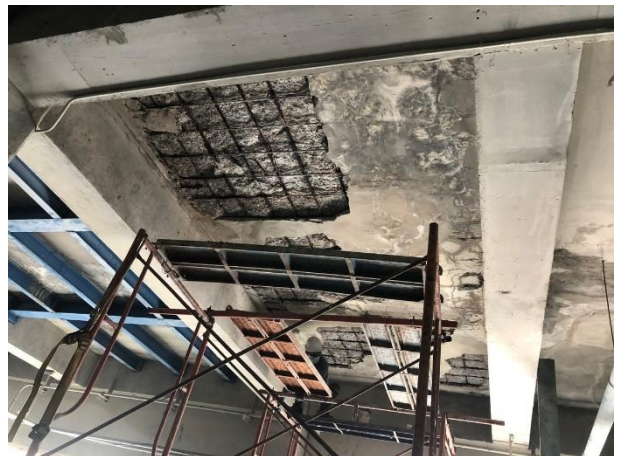

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

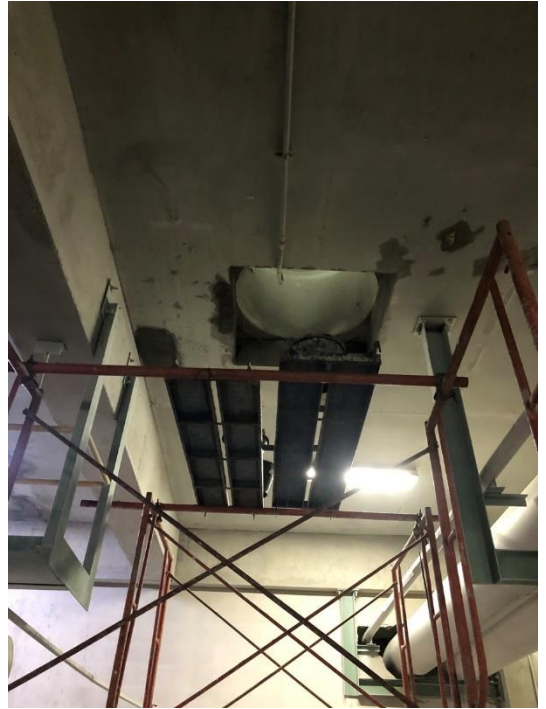

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair





TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

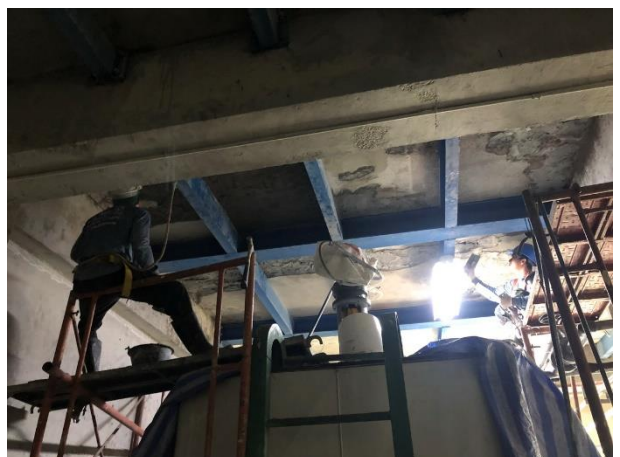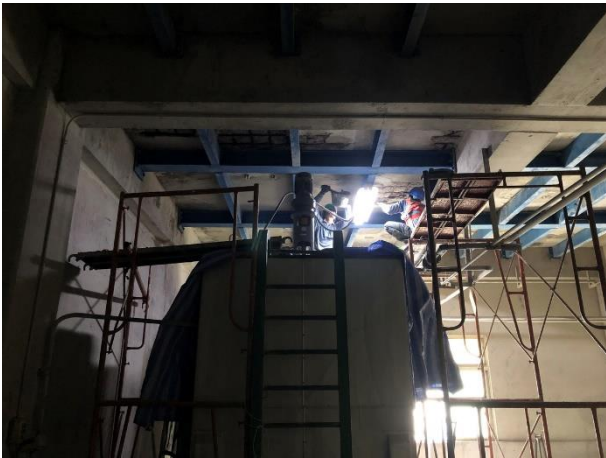

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair





TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

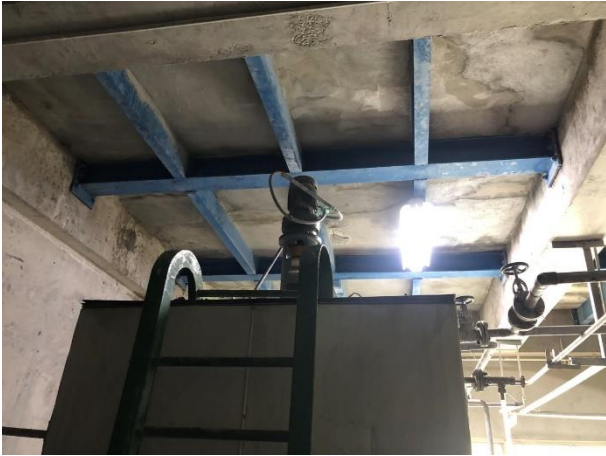


TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

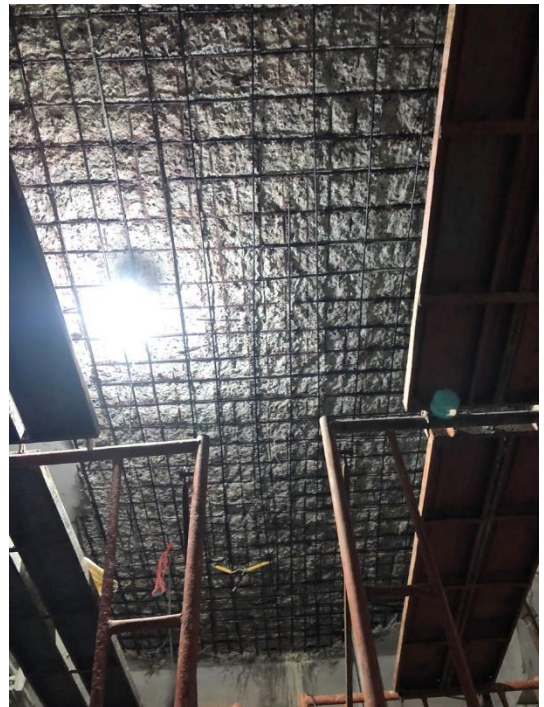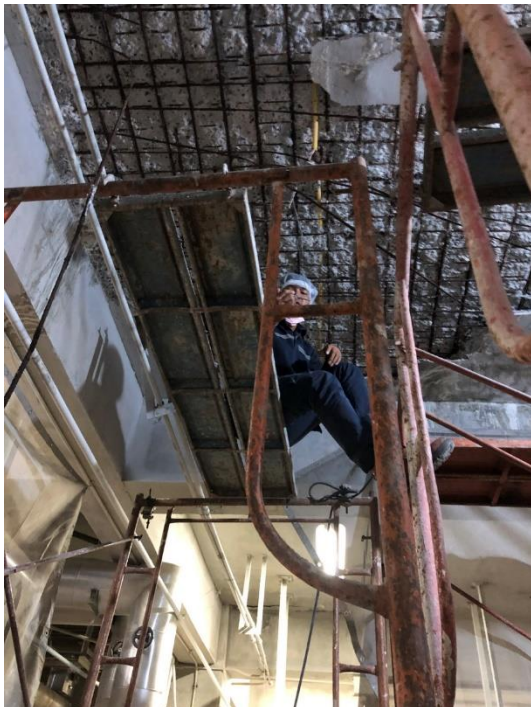

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

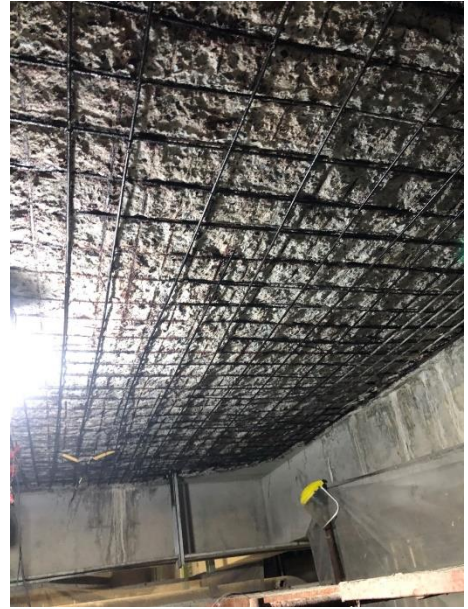


TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair




TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

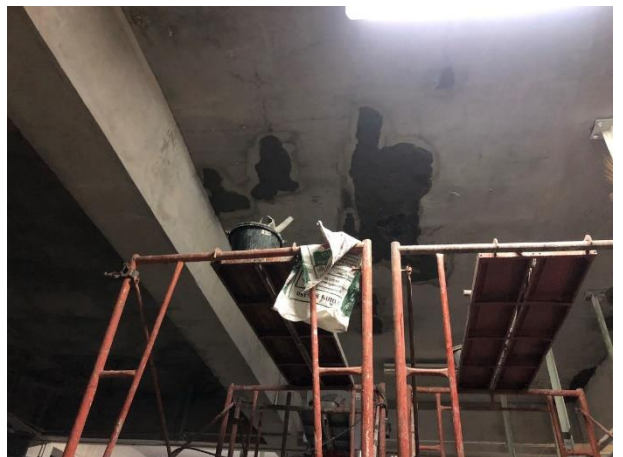

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

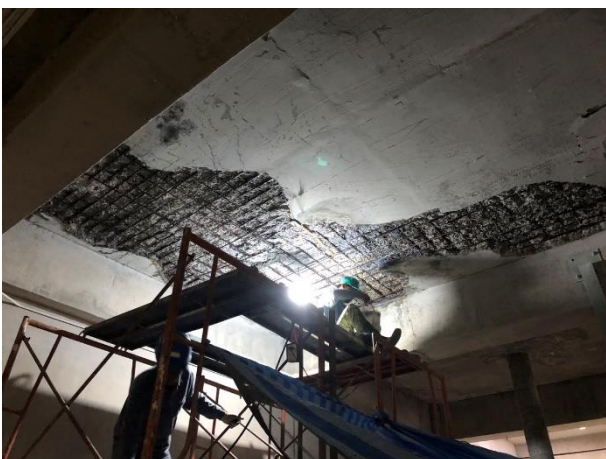


TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair



TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

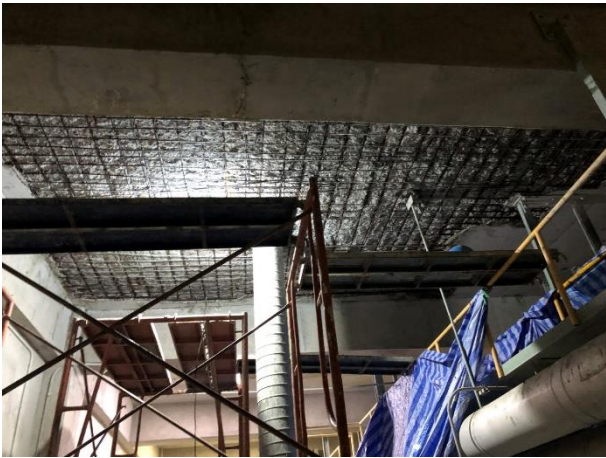

TOW1 RCC ROOFTOP / BELOW CONCRETE REPAIR
Remove concrete, put hardener & concrete to main slope

Ceiling: Spalling concrete repair

